

Edge Computing Gateway

EG8000mini

Quick Start Instructions



Contents

1. EG8000mini power supply and connection -----	3
1. powered by -----	3
2. Ethernet connection -----	3
2. Use of EG8000mini -----	3
1. login interface -----	3
2. system message -----	4
3. LTE properties -----	5
4. LAN configuration -----	5
5. advanced -----	6
6. Visual programming -----	7
7. Node Instructions -----	7
3. Remote management (EGManager instructions) -----	8
1. Software download and installation -----	8
2. account login -----	8
3. Add device -----	8
4. Remote upgrade -----	10
5. Remote configuration and programming -----	10
6. Intranet penetration -----	12


一、EG8000mini power supply and connection

1. powered by

Use DC12V to connect to the power supply terminal, you will see the ACT light flashing after power on.

2. Ethernet connection

first time using, need Connect the computer network port and device with an Ethernet cable connected to the LAN port of the EG8000mini, the default IP of the LAN port of EG8000mini is 192.168.88.1. The configuration needs to set the LAN port IP of the computer and EG8000mini to the same IP address segment, otherwise the device and the computer cannot communicate. As shown below:

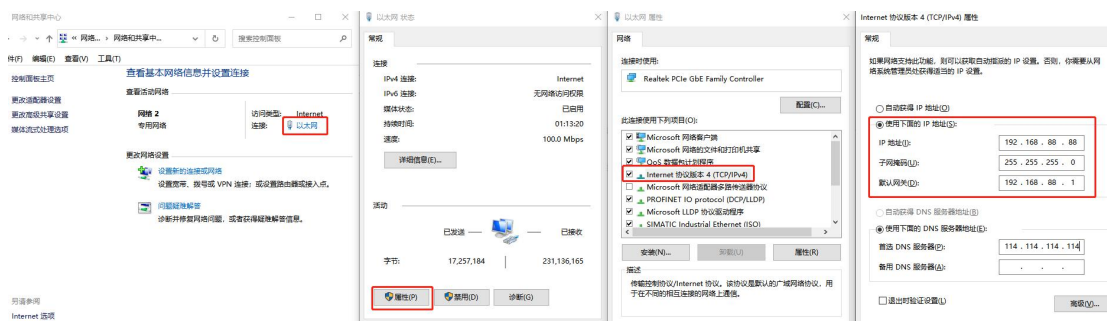

二、EG8000mini use


1. login interface

Open your browser and enter 192.168 in the address bar.88.1,EnterIn the login interface, the default management password is EG12345678 (you can modify it yourself after login).




- Administrative password: Enter the administrative password **EG12345678** Enter the device management interface

2. system message

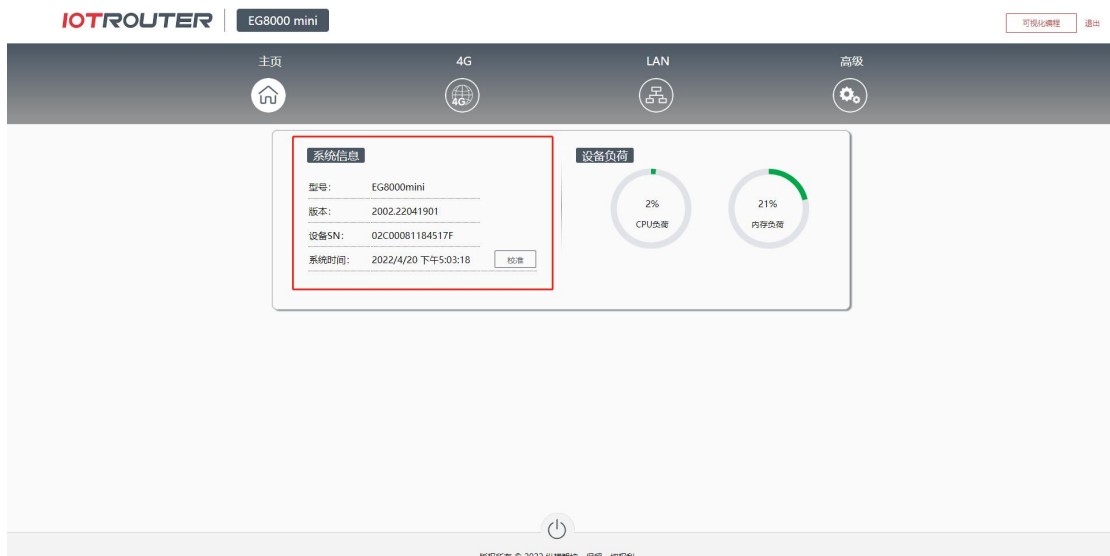


- Model: EG8000mini
- Version: 1002.22041101 (version has newer iterations).
- Device SN: The unique number of the device, which is required for remote management
- System time: RTC clock, click to calibrate
- **Networking mode: 4G by default, if it is the Ethernet version, you need to set the gateway of the LAN port to connect to the Internet through the Ethernet**

3. LTE properties

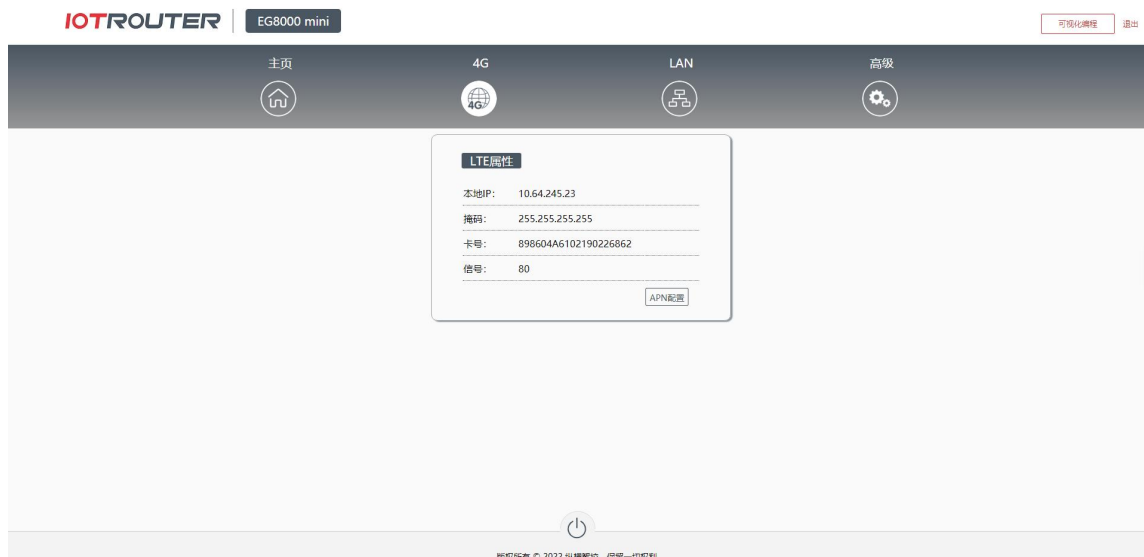

- Local IP: IP obtained by 4G
- Mask: Automatically generated
- Card number: SIM card number
- Signal: Current signal strength (range 0-100, the larger the value, the stronger the signal)
- APN: Support APN settings, click APN configuration to enter the APN settings interface

4. LAN configuration

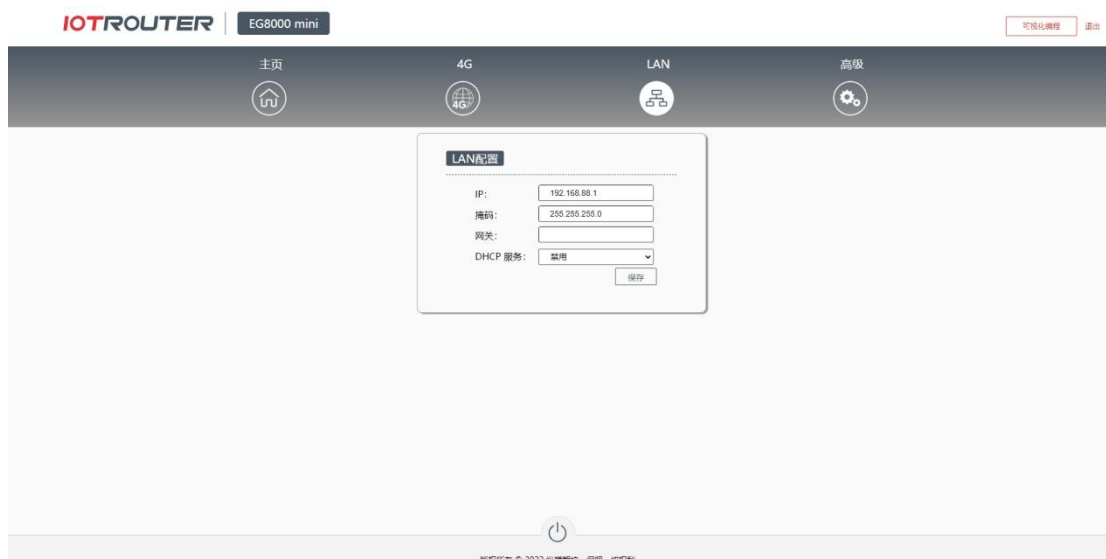


- IP: default 192.168.88.1 (you can change it by yourself after logging in to the configuration)

interface)


- Mask: Automatically generated
- Gateway: **The default is none, it needs to be set when using the Ethernet version**
- DHCP service: Disabled by default, click Enable, you can set the DHCP pool for external network supply, and save it to take effect after setting

5. advanced

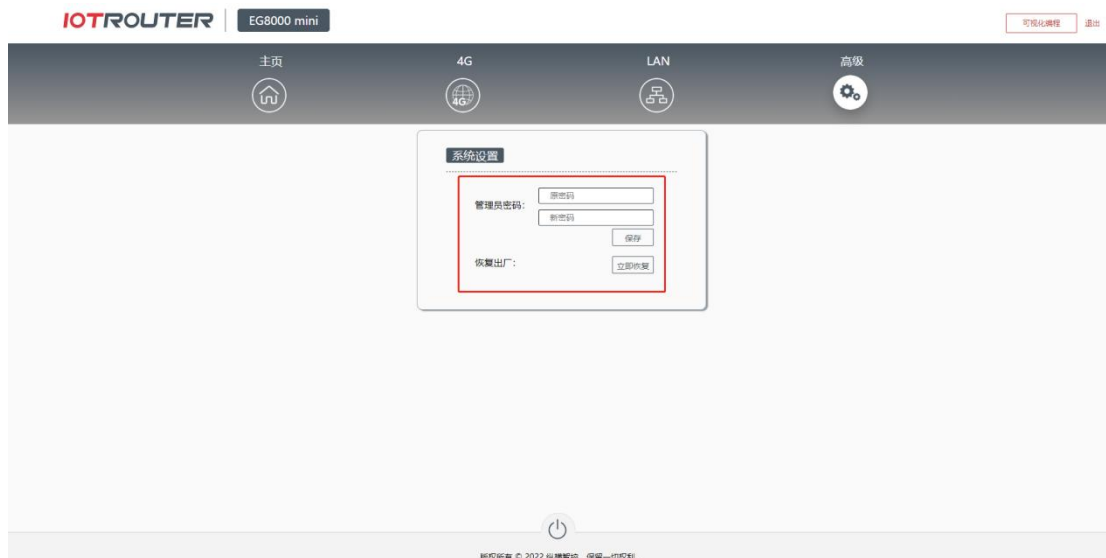


- Administrator password: modify the login password,
- Factory reset: restore to the factory configuration of the device, or reset by the REST reset button
- **Visual programming: Click on visual programming to enter the programming interface of the device**

6. Visual programming

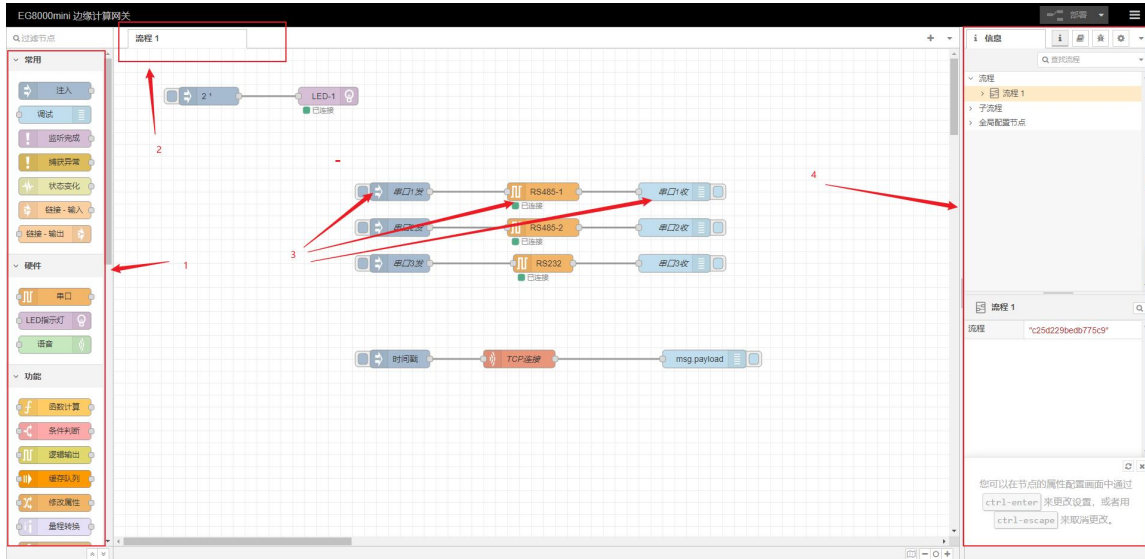

- 1: Function Node
- 2: Process Tab
- 3: Node
- 4: Sidebar

7. Node Instructions

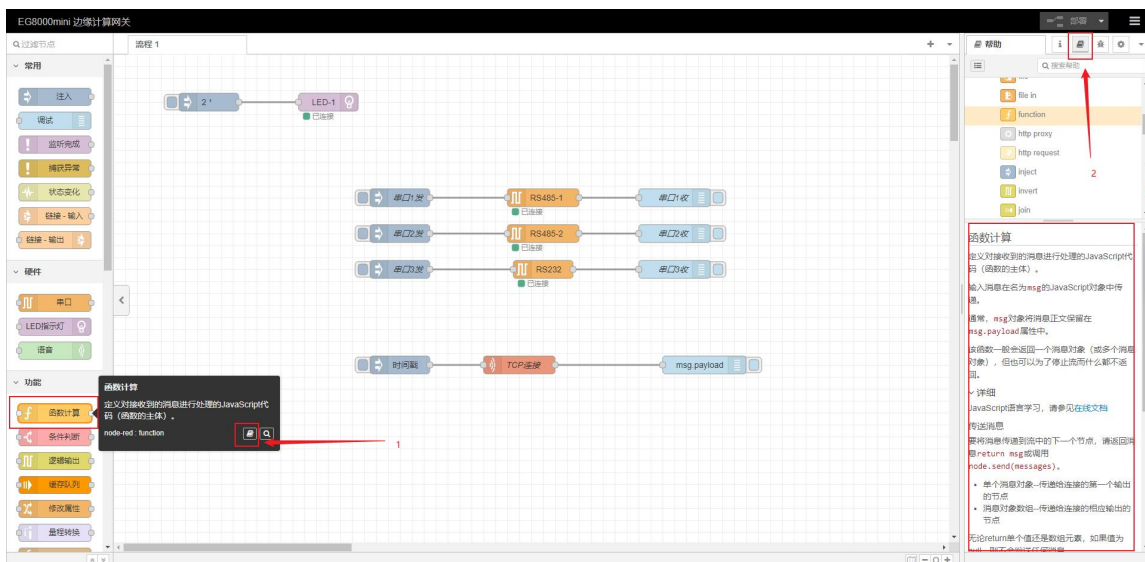

- 1: Click on the node
- 2: Click Help to view the corresponding instructions for the node


三、 Remote management (EG Manager Manual)

1. Software download and installation

go to <https://www.iotrouter.com/product/> Website, click "Download" to enter the download page, you can download the remote management software of EG8000mini.



2. account login

Open EGManager software, log in with your mobile number

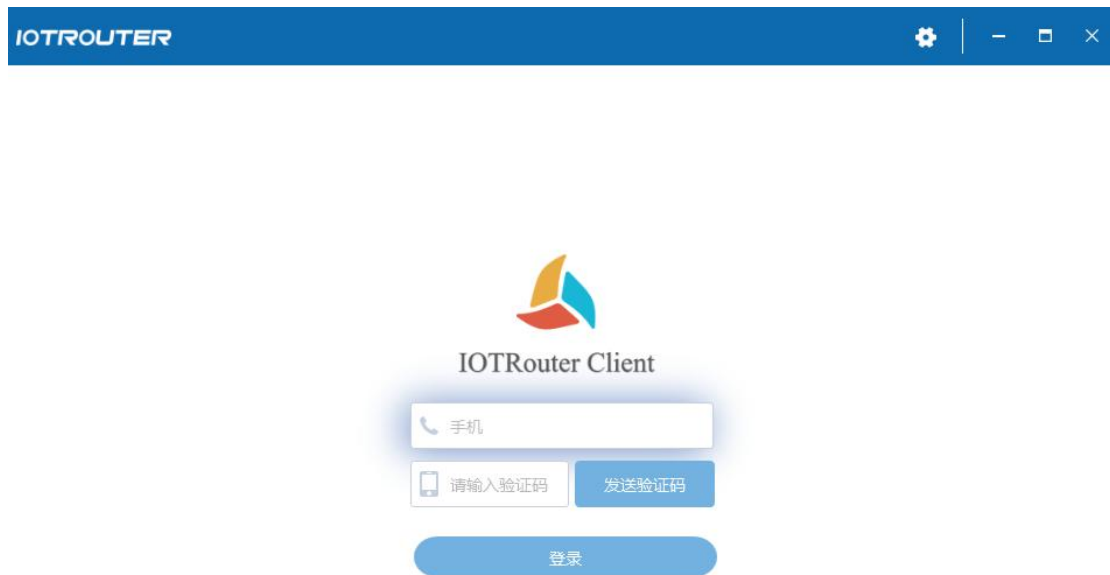

3. Add device

After logging in to the account, click on the lower left corner to add a device, where the SN is viewed in the login of the device, the password is the login password of the webpage, and the name is a custom name. Click Done after entering. (eachEG8000miniHave a unique SN and password,EG8000miniAfter binding the device, other people cannot bind it again, unless the owner deletes the device under the corresponding account to bind another account again)

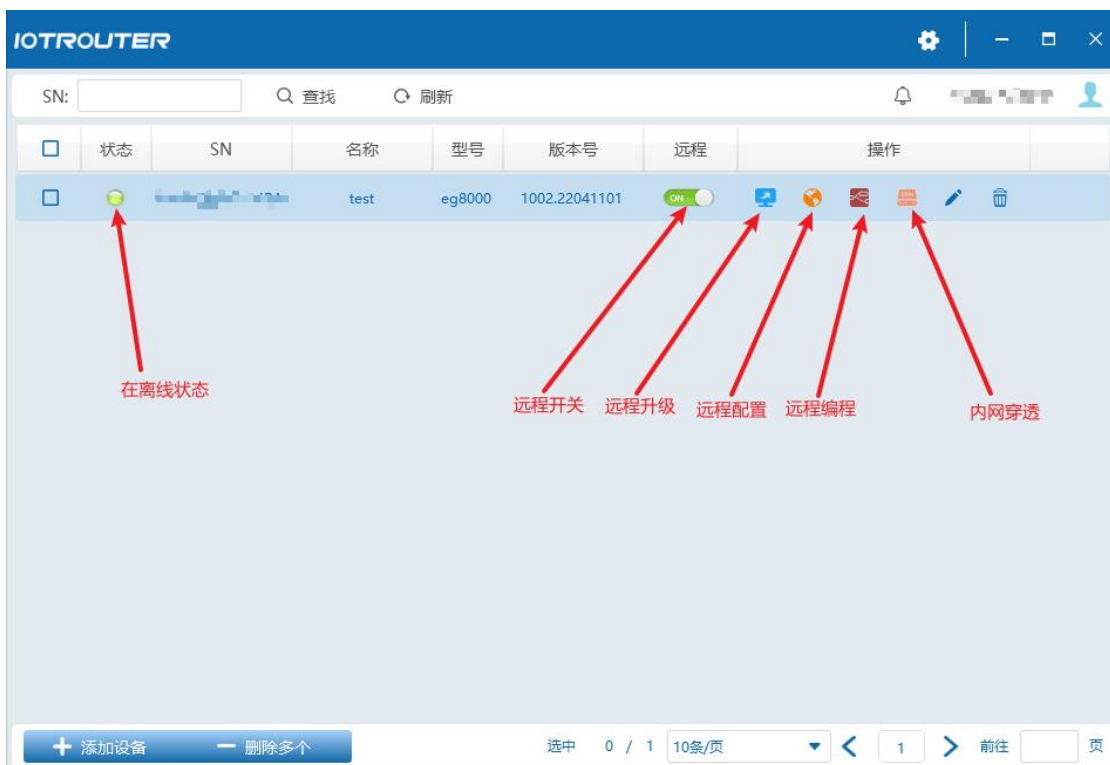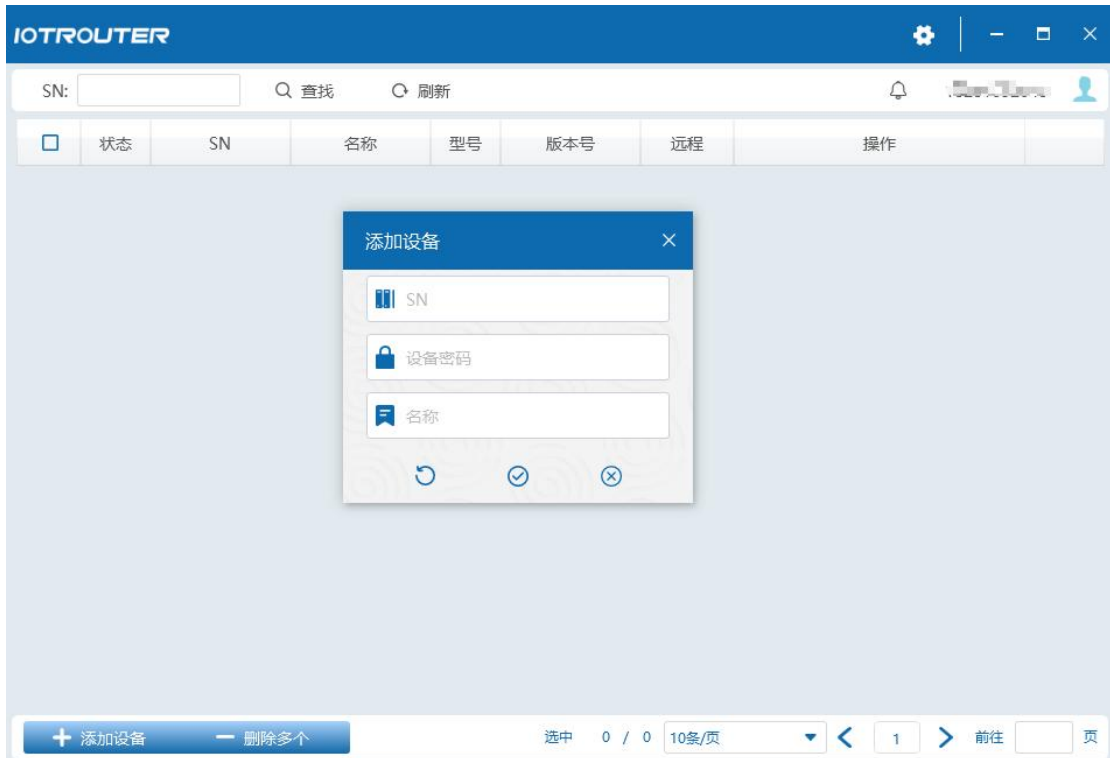


4. Remote upgrade


EG8000miniFirmware update, click Remote Update to automatically upgrade the firmware.

5. Remote configuration and programming

- Remote configuration


First, make sure that the device is online and the status is green. Click the remote button to enable the remote function, and click the remote configuration to automatically open the browser to jump to the web configuration interface.

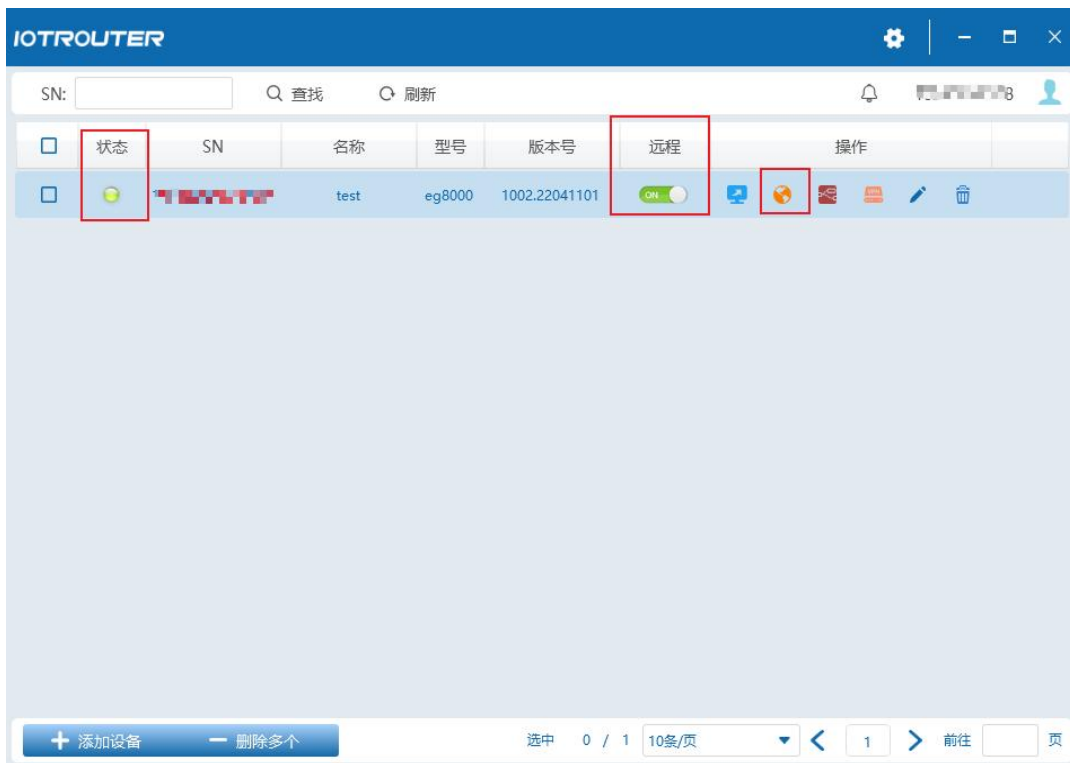


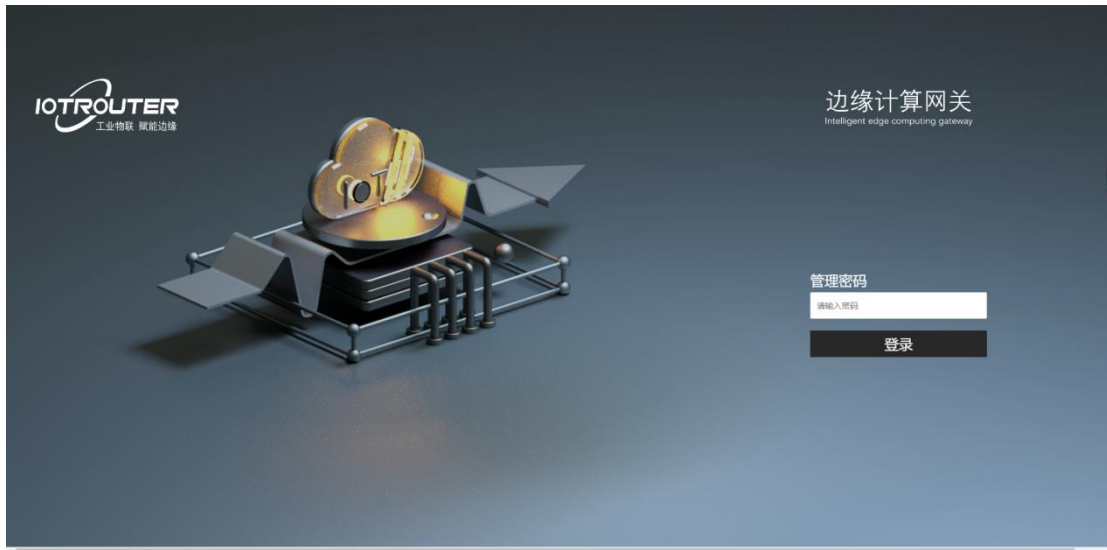

- Remote programming


Clicking the remote programming button will automatically jump to the programming interface (the remote cannot click the visual programming from the configuration interface to jump to the programming interface, you need to click the remote programming in the software to jump directly)

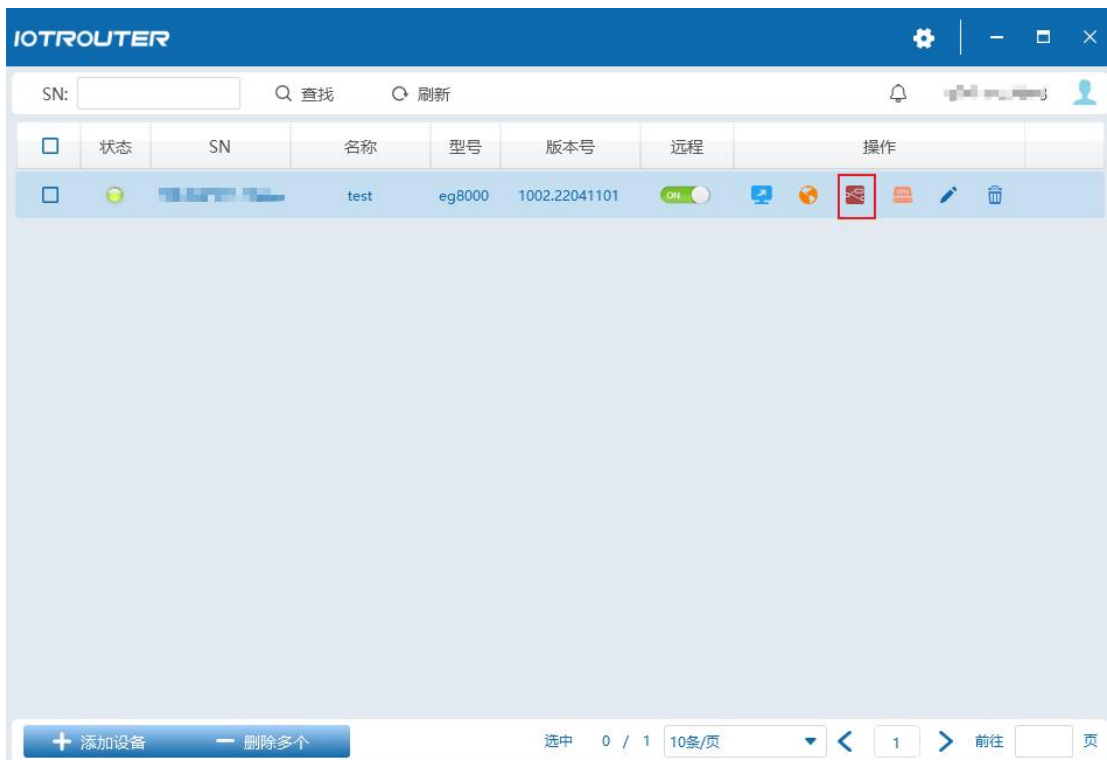

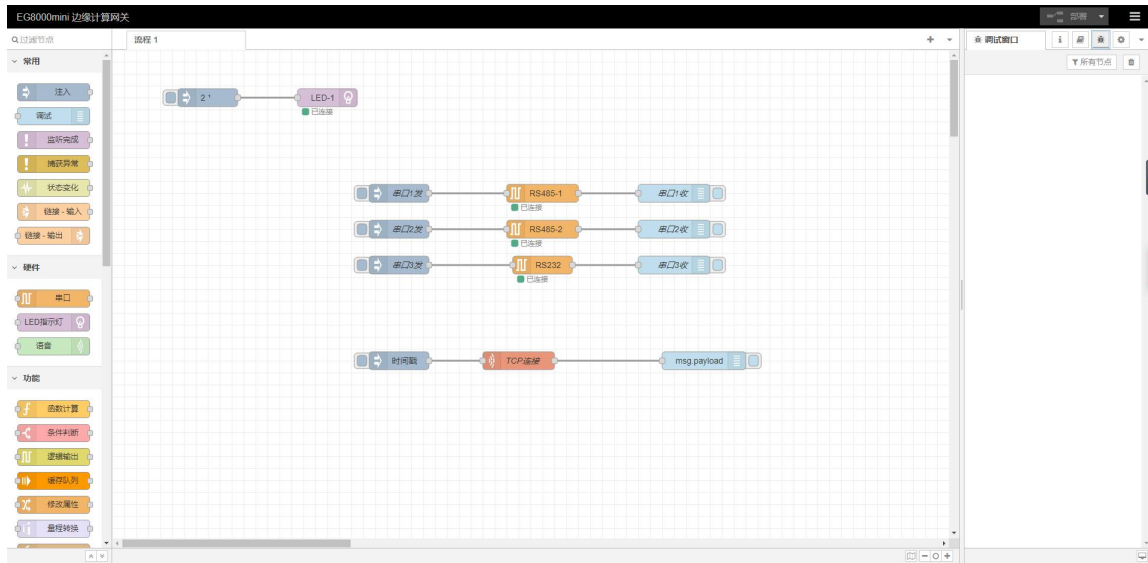

6. Intranet penetration

Click Remote LAN to enable intranet penetration, the software will automatically install a virtual network card on this computer,EG8000miniAnd assign an ip to this computer, the network segment of the ip andEG8000miniThe LAN port (the IP of the LAN port can be changed) is on the same network segment.

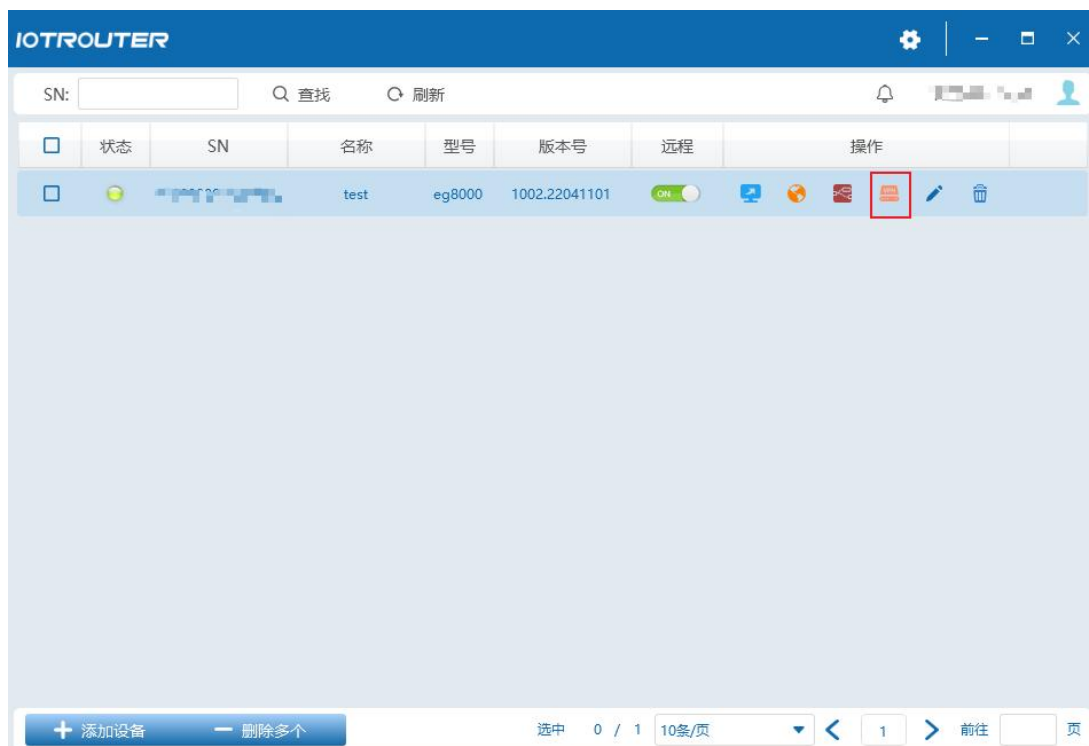

```

Microsoft Windows [版本 10.0.19044.1586]
(c) Microsoft Corporation。保留所有权利。

C:\Users\14771>ipconfig

Windows IP 配置

未知适配器 本地连接:

   连接特定的 DNS 后缀 . . . . . :
   本地连接 IPv6 地址. . . . . : fe80::4595:5e7f:6e87:15ba%25
   IPv4 地址 . . . . . : 192.168.88.240
   子网掩码 . . . . . : 255.255.255.0
   默认网关. . . . . : 192.168.88.1

以太网适配器 以太网:

   连接特定的 DNS 后缀 . . . . . :
   本地连接 IPv6 地址. . . . . : fe80::643a:8480:b973:6f02%10
   IPv4 地址 . . . . . : 192.168.0.15
   子网掩码 . . . . . : 255.255.255.0
   默认网关. . . . . : 192.168.0.1

C:\Users\14771>
    
```

IP allocation is successful, the machine can directly access EG8000minilocal area network.

Note:

The interface opened by the remote software cannot be closed. After closing, the intranet penetration will be closed.

